

Canon



SELPHY CP750/CP740

COMPACT PHOTO PRINTER



Printing Guide

This guide describes the basic and advanced operations of your SELPHY printer in easy to understand terms. Basic operation is simple! Just three steps: 1. Unpack, 2. Prepare, 3. Print.

step 1
Unpack p. 2

step 2
Prepare p. 3

step 3
Print p. 5

**Enjoy a
Multitude of
Functions** p. 8

**Connecting the
Printer to Your
Computer** p. 11

**Separately
Sold Items** p. 12

Troubleshooting p. 13

**Safety
Precautions** p. 15

ENGLISH



 
Exif Print




step 1

Unpack


Check that the following items are supplied with your purchase.

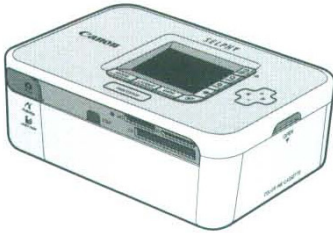


Main Printer Unit

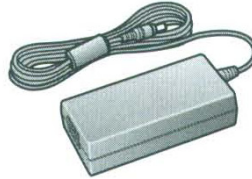 


Compact Power Adapter

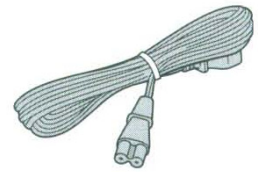 


Power Cord

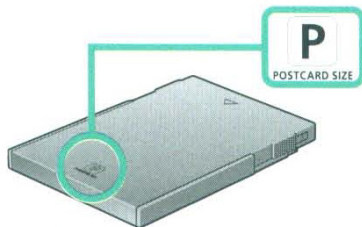 


Paper Cassette
(Postcard Size)

 

 
CD-ROM:
Compact Photo
Printer Solution Disk

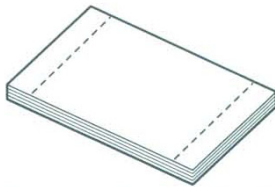

Starter Paper Pack
(Postcard Size)

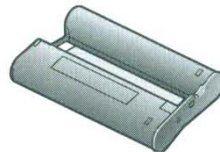 

Starter Ink Cassette
(Postcard Size)

 

Cleaner

Depending on the region, the card size paper cassette may be supplied with the printer.

 
Caution!

Match Paper Stocks, Paper Cassettes and Ink Cassettes Correctly

The printer will not print correctly if you mismatch paper stocks to paper cassettes or ink cassettes.

Paper Cassette

Ink Cassette

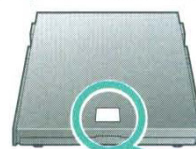

Size Indication

step 2


Prepare

In this step you will insert the ink and paper cassette to prepare for printing.


Although these illustrations show the SELPHY CP750, the procedures apply equally to the SELPHY CP740.

1 Install the ink cassette.

 Open the ink cassette compartment cover on the printer.

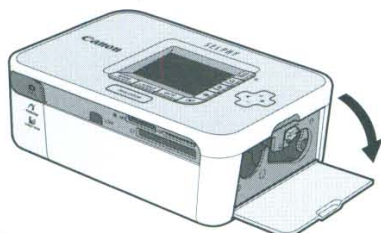


 Insert the starter ink cassette into the printer until it clicks firmly into place and close the cover.

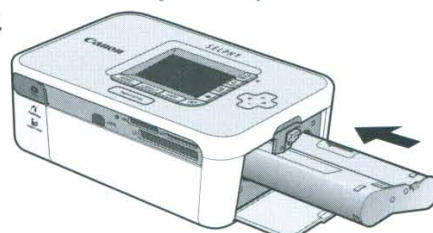


2 Place paper into the paper cassette.

 
Slide the lid of the paper cassette back until it comes to a stop.

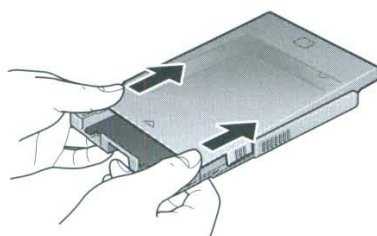

 
While firmly holding the paper cassette, lift the lid upward.

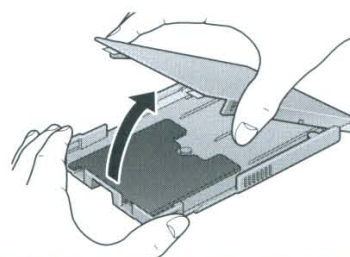

 Insert the paper into the paper cassette with the shiny side facing up.
Align the paper beneath the tabs.

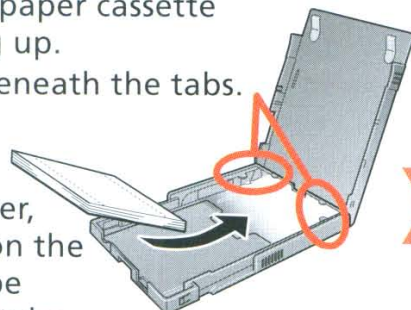


Close the lid until it clicks shut.

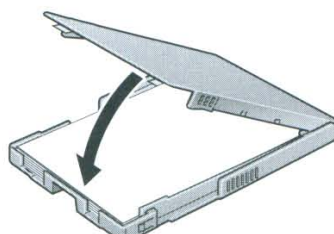 


For postcard size paper, the address portion on the bottom face should be oriented toward the tabs.

 Slide the lid of the paper cassette back until it comes to a stop.

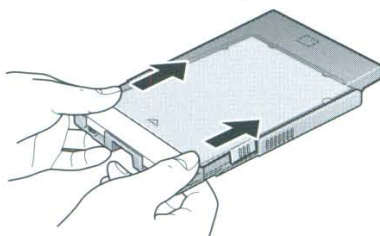

Correct Position

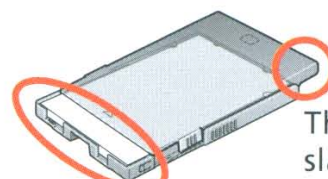 


Slightly open

The lid is slanted.


3 Install the paper cassette into the printer.

 Open the paper cassette slot cover.

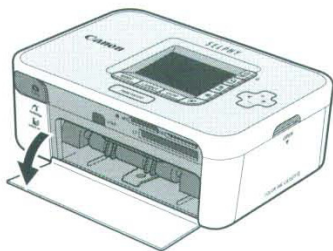


Insert the paper cassette into the printer all the way.

 Paper visible through opening

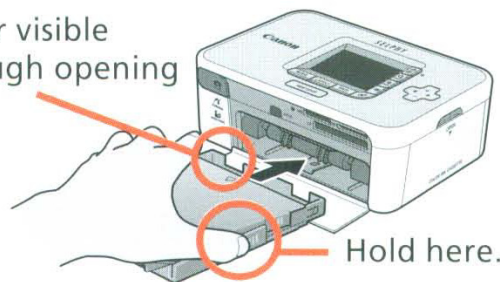


4 Attach the power cord.

 Plug the power cord into the compact power adapter, and then the plug into a power outlet.

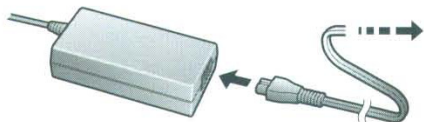

 Attach the compact power adapter connector to the printer's DC IN terminal.

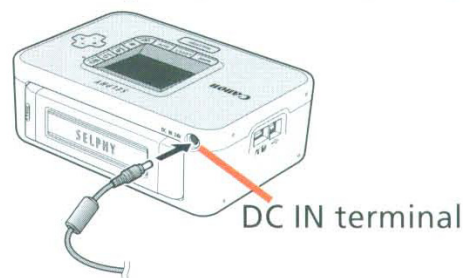

Can I use general printer paper or postcards?

 
 
No. Always use paper specific to SELPHY CP series printers included in the genuine Canon brand "Color Ink/Paper Sets".

Paper sets specific to SELPHY ES series cannot be used.



How can I use Card Size or Wide Size paper cassettes?


Card Size and Wide Size paper cassettes are shaped a little differently from the Postcard Size and L Size paper cassettes. Open the outer lid and inner lid, and set the paper into the cassette. Close only the inner lid and insert the paper cassette into the printer.

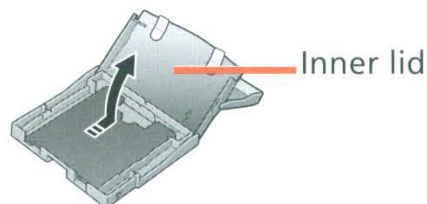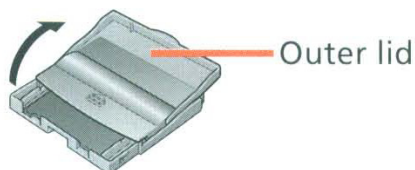


Printing from Memory Cards

In this step you will insert a memory card with images into the printer, and print.

 - 1 Press and hold the printer's power button until the start-up image (shown below right) displays on the LCD monitor.

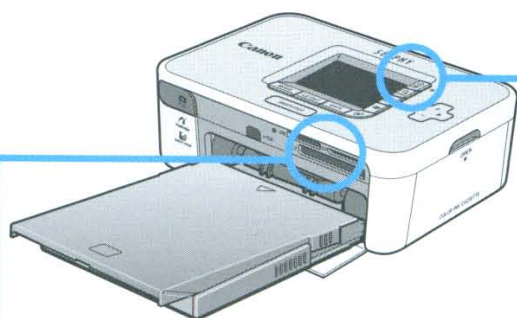


Press and hold until the image appears.

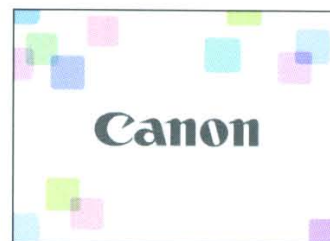 

- 2 Insert the memory card into the appropriate card slot.

 With the label side facing up insert the memory card fully.

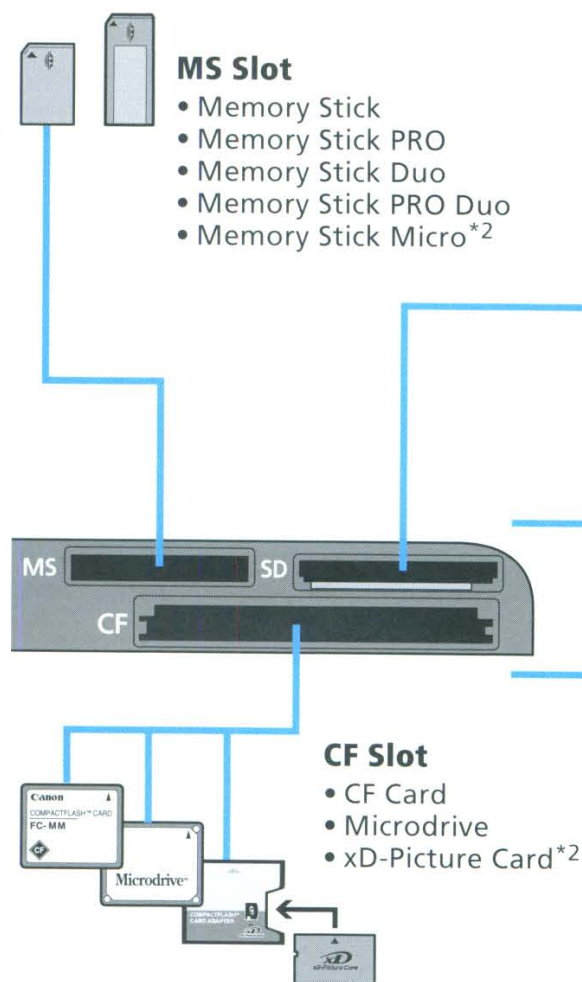

MS Slot

 
- Memory Stick
- Memory Stick PRO
- Memory Stick Duo
- Memory Stick PRO Duo
- Memory Stick Micro*2

SD Slot

- SD Memory Card
- miniSD Card*1
- microSD Card*2
- SDHC Memory Card
- miniSDHC Card*1
- microSDHC Card*2
- MultiMediaCard
- MMCplus Card
- MMCmobile Card
- MMCmicro Card*2
- RS-MMC Card

CF Slot


- CF Card
- Microdrive
- xD-Picture Card*2

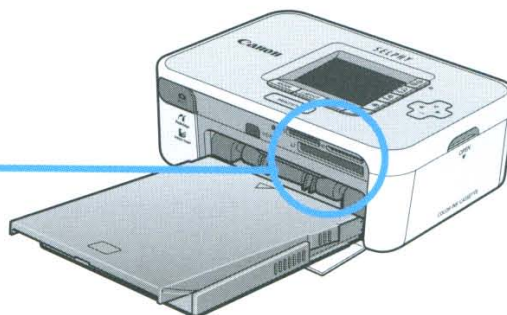


*1 Align the card with the guides on the bottom of the slot and insert.

*2 A specialized adapter is required (For xD-Picture Cards, purchase a CompactFlash card Adapter for xD-Picture Cards separately.)

 3 Press ◀ or ▶ to select an image to print.

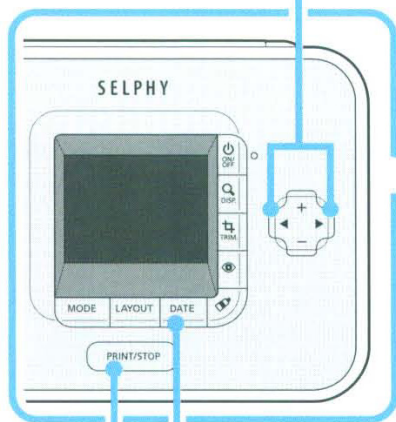

Installed Ink
Cassette Type

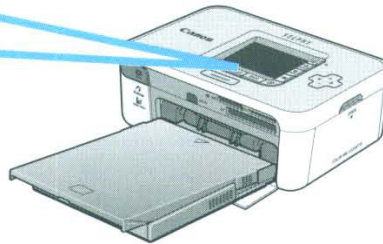 

4 Press the Date button. Press ◀ or ▶ to select whether or not to include the date imprint, then press the Date button again.

When the bottom right of the monitor shows , the date does not print. When it shows , the date will print in the [month/day/year] format.

5 Press the Print/Stop button.

Printing will start. The paper will pass in and out four times. Do not touch the paper during this process.

After confirming that the image has printed, remove the memory card.

To turn the printer off, press the power button again for a moment.



 
Do not print on printed paper.



How many prints can the starter ink cassette print?

It can make five prints, the same number as the supplied starter paper sheets. A symbol similar to the one at the right will appear on the LCD monitor when the ink runs out. Please exchange the ink cassette with a new one.

 
Note that unlike inkjet printers, SELPHY series printers cannot print any more prints than those noted on the color ink/paper set packages.

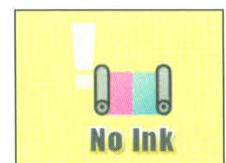


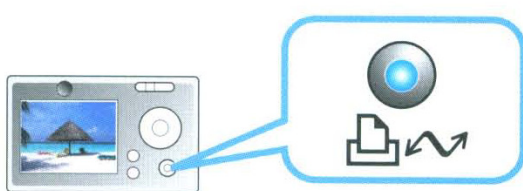 
Printing by Connecting Your Camera

If your Canon digital camera has a  (Print/Share) button, you can connect the camera to the printer for easy printing.

- 1 Pull the cable out of the printer and attach it to the camera's DIGITAL terminal.**

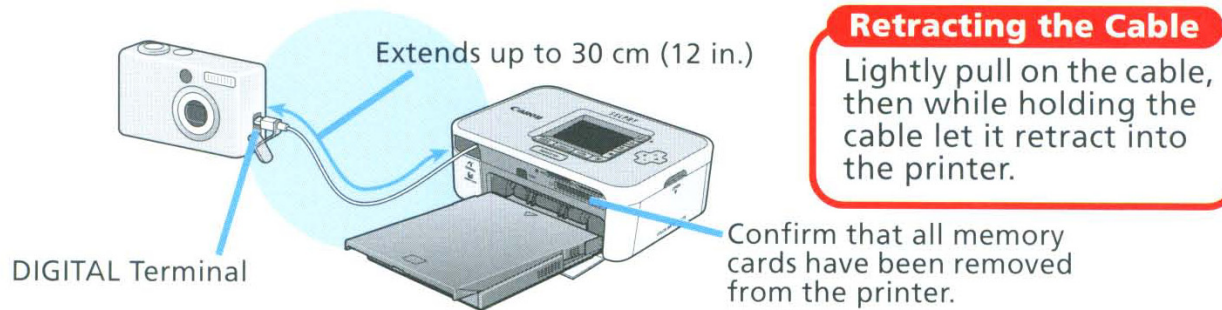

- 2 Press and hold the printer's power button until the start-up image displays on the LCD monitor.**
- 3 Select an image on the camera's LCD monitor and press the  (Print/Share) button.**



Non-Canon brand cameras that are compliant with PictBridge can also be used. If the connector on the cable does not fit your camera's terminal, use the USB cable supplied with your camera. Refer to your camera's operation manual for further details.

Printing from Mobile Phones

The CP750 can print without a cable connection from a mobile phone that supports infrared data transmission (IrDA, IrSimple). If you use a mobile phone that supports the Bluetooth protocol, you can print wirelessly with the separately sold Bluetooth Unit BU-20.

Up to approximately
20 cm (7.9 in.)



 
The distance over which infrared data signals can be transmitted varies according to the mobile phone model and transmission environment.

The signal transmission distance for Bluetooth is about 10 m (32.8 ft.).

Enjoy a Multitude of Functions

This section introduces the numerous functions that make printing fun.

The CP750 is used for the illustrations.

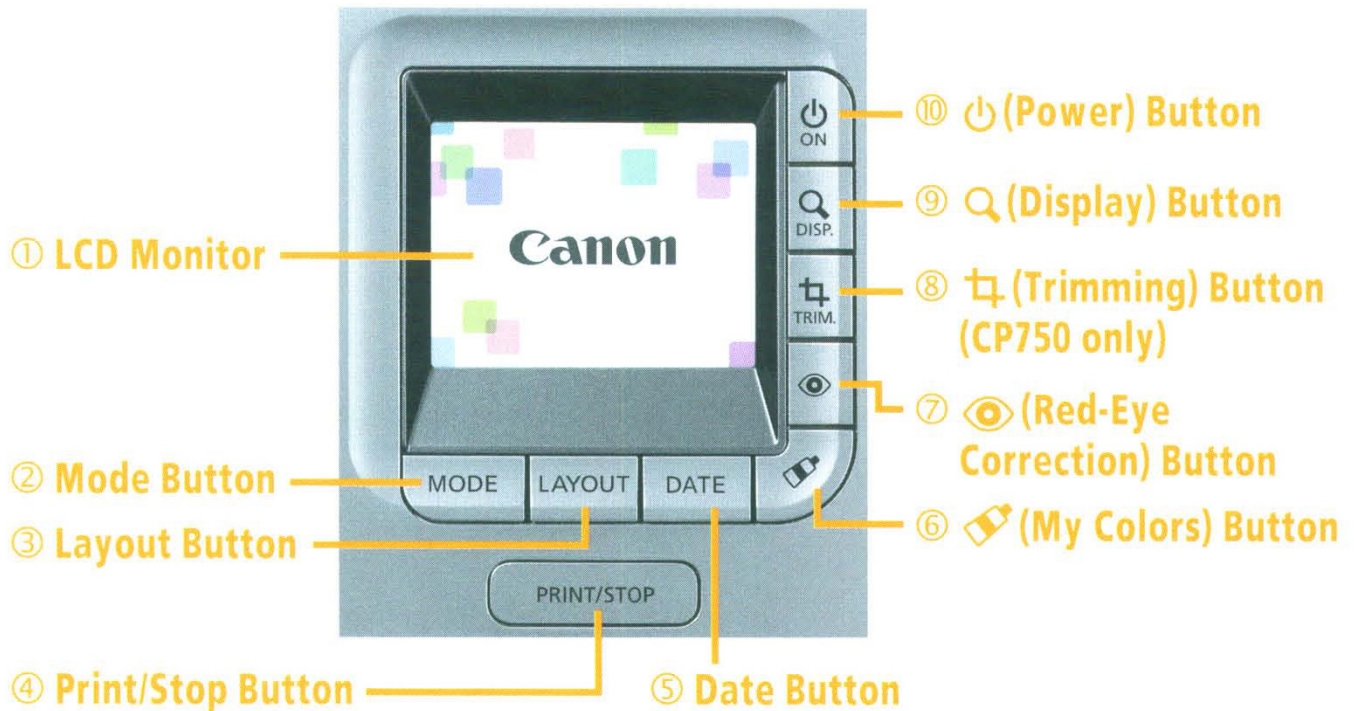


① LCD Monitor

It displays the memory card images and current settings information.


CP750 Monitor

 Selected Image

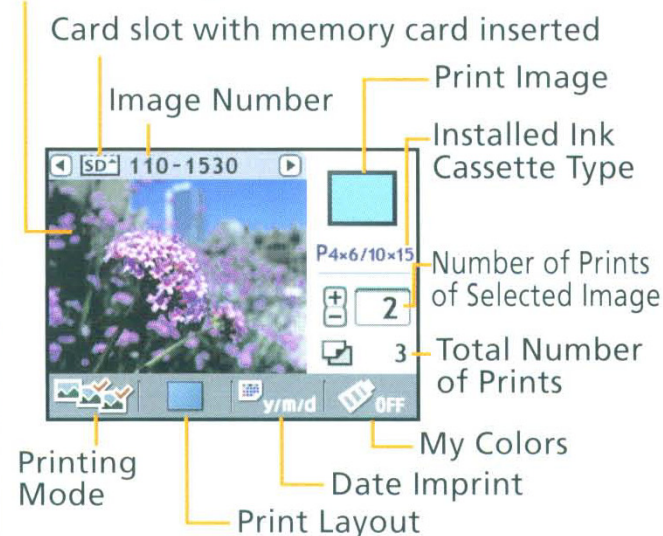


CP740 Monitor

 Card slot with memory card inserted

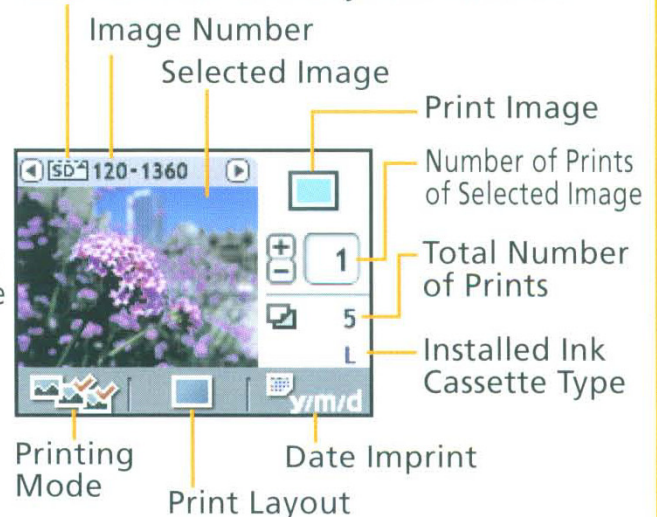

② Mode Button

 This button sets the printing mode as follows:

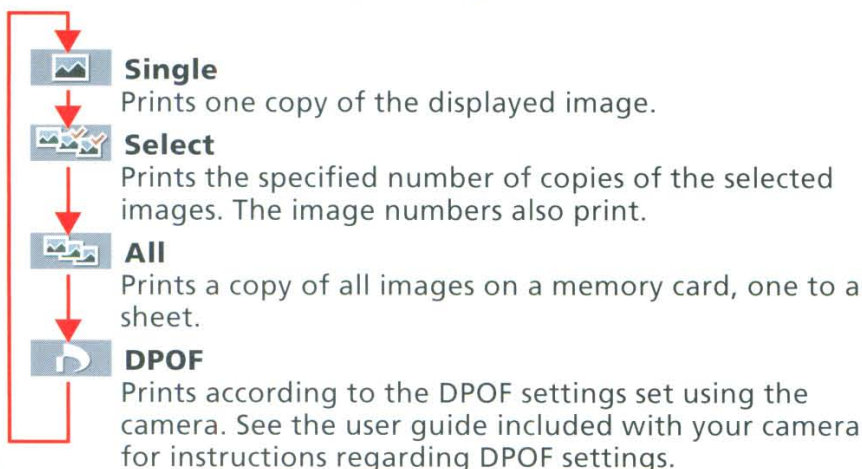


Printing Using the Select Mode

1. Press ◀ or ▶ to select an image to print.
2. Select the number of prints using + or -.
3. Repeat Steps 1 and 2 as required for successive images.
4. When you finish, press the Print/Stop button.

③ Layout Button

 This button sets the print layout as follows:

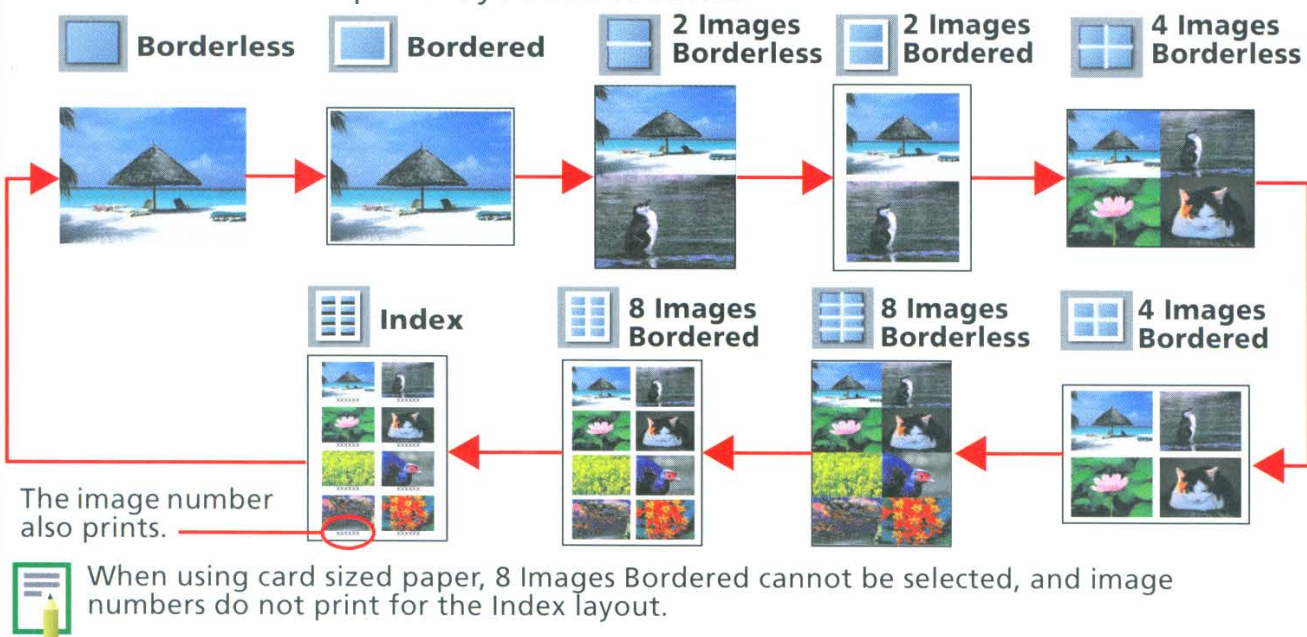

④ Print/Stop Button

Press this button to start printing.

Pressing this button while printing is in progress stops printing. It still consumes one print's worth of ink even when printing is stopped.

 
⑤ Date Button

This button sets the date imprint format as follows:



⑥ 🖨️ (My Colors) Button (CP750 only)

This button sets the My Colors function as follows:

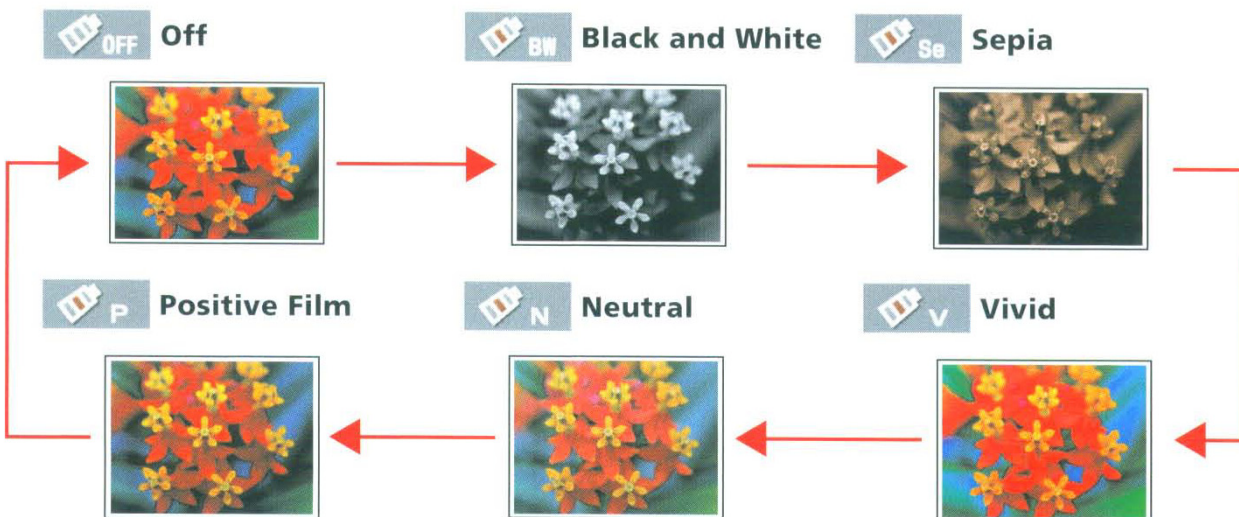



⑦ 👁️ (Red-Eye Correction) Button

 
This button lets you set red-eye correction, which corrects the red-eye in an image shot with a flash and prints out the corrected image.

⑧ ✂️ (Trimming) Button (CP750 only)

This button enters the trimming mode, which lets you enlarge a portion of an image for printing. (The trimming feature can only be used in the 🖼️ (Single) mode.)

How to Select the Trimming Area

1. Press the ✂️ (Trimming) button, followed by the Q (Display) button.
2. Press + and – to adjust the print area size, and ◀ and ▶ to rotate the print area frame.
3. Press the Q (Display) button again, followed by +, –, ◀ and ▶ to move the print area as desired.
4. Press the ✂️ (Trimming) button.
5. Press ◀ or ▶ to select  (OK) or  (Cancel), and press the ✂️ (Trimming) button again.

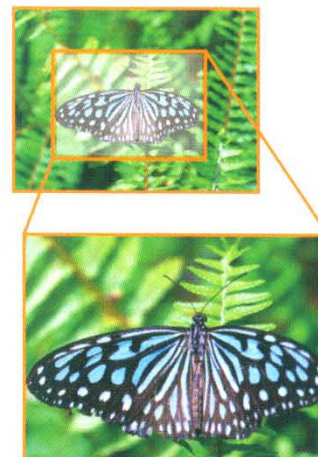

⑨ Q (Display) Button

Press this button to display the image at a larger size. Press it again to restore it to its original size.

⑩ ⏻ (Power) Button

Press and hold this button to turn the power on.
Press and hold it again to turn the power off.

Connecting the Printer to Your Computer

Installing the Printer Driver

The following explains the installation procedure for Windows.



- **Do not connect the printer to the computer yet.**
- **You must login to the computer as an administrator before beginning installation.**

1

Place the supplied Compact Photo Printer Solution Disk into the computer's CD-ROM drive.

Macintosh

In addition, double-click the  (CPSD Installer) icon in the CD-ROM window.

2

Click [Select Printer] in the printer driver window and select your printer.

Macintosh

In addition, click [Agree], select [Easy Install], followed by [Install].



 
3

Follow the onscreen instructions.

When you are prompted to attach the printer, attach the printer to the computer and turn the printer on.

Macintosh

Restart the computer when prompted. After restarting the computer, attach the printer to the computer and turn the printer on.

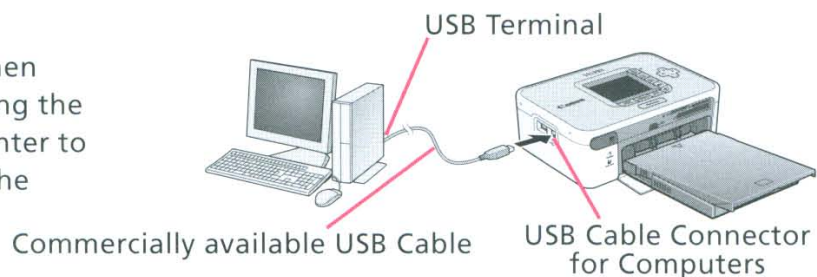


4

Click the [Finished] or [Restart] button when it appears. This completes the driver installation.

Macintosh

 Open the [Utilities] folder on the start-up disk and double-click the [Printer Settings Utility] icon. Click [Add (Printer)] and select [USB] followed by your printer. Finish by clicking the [Add] button and closing the window. This completes the driver installation.

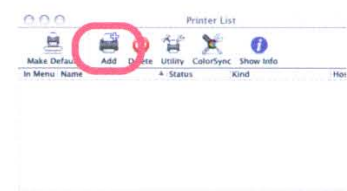

Separately Sold Items

Expand the capabilities of your SELPHY printer by using separately sold items. Some items are not sold in some regions.

Paper Size	Content	Product Name
Postcard Size	36-sheet package	Color Ink/Paper Set KP-36IP
	72-sheet package	Color Ink/Paper Set KP-72IP
	108-sheet package	Color Ink/Paper Set KP-108IP
	Paper Cassette	Paper Cassette PCP-CP200
Card Size	36-sheet package	Color Ink/Paper Set KC-36IP
	18-sheet package (Full-page labels)	Color Ink/Full-Size Label Set KC-18IF
	18-sheet package (8-label sheets)	Color Ink/Label Set KC-18IL
	Paper Cassette	Paper Cassette PCC-CP100
L Size	36-sheet package	Color Ink/Paper Set KL-36IP
	Paper Cassette	Paper Cassette PCL-CP200
Wide Size	24-sheet package	Color Ink/Paper Set KW-24IP
	Paper Cassette	Paper Cassette PCW-CP100

Other Accessories

Battery Pack	NB-CP2L (CP750 only)
Bluetooth Unit	Bluetooth Unit BU-20



- **Use a paper cassette and ink cassette specific to SELPHY CP series printers. (Do not use ES series paper and ink cassettes.)**
- **Do not print on printed paper.**


The CP750 Enables On-Site Printing Using a Separately Sold Battery Pack

1. Remove the battery compartment cover.



- ① Press and hold down the switch.
- ② Remove the cover.

 
2. Attach the battery pack.

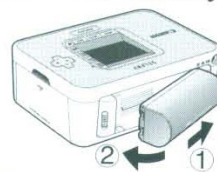

Indicator
 Orange: Charging
 Off: Charge complete
 Blinking Orange: Low battery

3. Charge the battery.

 (Approx. 2.5 hours to fully charge a depleted battery pack).

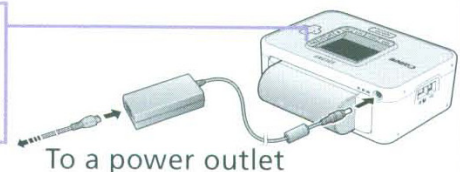

Number of prints (while using the battery pack)

Postcard: approx. 36, L: approx. 36, Card: approx. 72, Wide: approx. 24

Canon shall not be liable for any damage to this product and/or accidents such as fire, etc., caused by the malfunction of non-genuine Canon accessories (e.g., a leakage and/or explosion of a battery pack). Please note that this warranty does not apply to repairs arising out of the malfunction of non-genuine Canon accessories, although you may request such repairs on a chargeable basis.

Troubleshooting

Solutions for when you cannot print as expected, or think the printer is not operating properly.



Power will not turn on...

Did you press and hold the power button until the start-up image displayed? Check the compact power adapter, the main printer unit and the power cord to ensure that they are correctly connected.



Cannot print...

Have you run out of ink sheets? SELPHY series printers cannot print any more than the number of prints indicated on the color ink/paper cassette packages. The starter ink cassette can be used to print 5 sheets. Check that you are using the correct paper, paper cassette, and ink cassette combination.



 
I have extra paper but the ink ran out...

Some ink may be consumed even if you don't print if you tug on the ink sheets or needlessly turn the power on/off repeatedly. Also, the ink can be wasted if you take out the ink cassette when the paper sheets run out during a multiple print run. Remove the paper cassette and replenish the paper without removing the ink cassette.



Cannot print cleanly...

Did you set paper specific to SELPHY CP series printers in the cassette with the shiny side upward as required? If the ink sheet becomes dusty, blow it clean with a blower brush or similar device. If narrow stripes appear, remove the ink cassette and slide the supplied cleaner in and out two or three times to clean the interior of the printer.

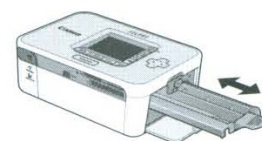

Images will not appear even with a memory card inserted...

Confirm that the memory card is inserted all the way into the correct slot. Also confirm that the images conform to the Design rule for Camera File system.



Cannot set the mode, print layout, date imprint and print number as expected...

Some categories cannot be selected or are disabled with certain combinations of print mode, print layout, date imprint and print numbers.



Experiencing numerous paper jams...

Placing 19 or more sheets in the paper cassette (13 or more Wide size sheets) will lead to mis-feeds or paper jams. Moreover, do not let 10 or more sheets of printed paper collect on top of the paper cassette.

List of Error Symbols

	Cannot display image		Ink cassette error
	No images on memory card		Low battery (CP750 only)
	Cannot read image		Communication error
	Paper Error/No paper		Connection broken
	Paper jam		Unsupported USB device
	No ink		USB hub has been connected
	Ink cassette and paper stock are mismatched		Other error

Indicator Status (CP750 only)

Green: (Power On) Standing By, Blinking Green: Printing, Red/blinking Red: Error

Refer to the Printer User Guide for more detailed instructions

The Printer User Guide is included in the supplied CD-ROM. Refer to this guide for details on operating procedures and troubleshooting suggestions.



* The Adobe Reader program is required to view the Printer User Guide.

* If using Windows, the Printer User Guide is copied to [Documents] or [My Documents].

Safety Precautions

- Use this equipment correctly according to the following precautions to avoid the risk of injury, fire, electrical shock, malfunctions and other hazards. Equipment refers to the printer, compact power adapter, ink cassette, paper cassette, or paper.
- Please also read the "Safety Precautions" and "Handling Precautions" sections of the electronic manual (Printer User Guide) contained on the supplied CD-ROM.



WARNINGS

- Do not play the supplied CD-ROM(s) in any CD player that does not support data CD-ROMs. Playing the CD-ROM(s) in an audio CD player (music player) could damage the speakers. It is also possible to suffer from hearing loss from listening with headphones to the loud sounds of a CD-ROM played on a music CD player.
 - Store the equipment in a place where it cannot be reached by children.
 - Do not disassemble or modify the equipment.
 - If the equipment is dropped or the casing becomes damaged, do not continue operation.
 - Stop operating the equipment immediately if it emits smoke or noxious fumes.
 - Do not allow water or other liquids to enter the interior of the equipment.
If the equipment is subjected to water droplets or damp salty air, gently wipe it with a soft, absorbent cloth.
 - Do not insert or drop metallic objects or flammable substances into the equipment interior. Immediately switch off the printer power and disconnect the plug of the compact power adapter from the electrical outlet. (If powering it by battery, remove the battery pack.)
 - Do not touch metal parts of the equipment or the power plug during thunderstorms. Immediately stop using the equipment and distance yourself from it.
 - Do not use flammable solvents such as alcohol, benzene, or paint thinner to clean the equipment.
 - Do not rest heavy objects on the power cord or plug, pull on it with excessive force or damage it.
 - Do not use a power source (compact power adapter, battery) that is not specified for the equipment.
 - Remove the power cord on a regular periodic basis and wipe away the dust and dirt that collects on the plug, the exterior of the power outlet and the surrounding area.
 - Do not handle the power cord if your hands are wet.
-
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon.
 - While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Canon reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
 - Canon makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the printer, the software, the memory cards, personal computers, peripheral devices, or use of non-Canon memory cards.
 - The SDHC logo and miniSDHC logo are trademarks.

FCC Notice

(Printer, Model CD1025/CD1026 Systems)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A., Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516) 328-5600

Canadian Radio Interference Regulations

This Class B digital apparatus complies with Canadian ICES-003.

Réglementation canadienne sur les interférences radio

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Made in Japan C86-1081

Canon

**COMPACT PHOTO
PRINTER**

.....
Solution Disk

Ver. 9.0

For Macintosh

Canon Utilities:

ImageBrowser 5.8
PhotoStitch 3.1
EOS Utility 1.1
CP750/740 Printer Driver 4.1

**J
E
F
S
C**

For Windows

Canon Utilities:

ZoomBrowser EX 5.8
Easy-PhotoPrint 3.6
PhotoStitch 3.1
EOS Utility 1.1
CP750/CP740 Printer Driver 3.5
(for Windows Vista/XP/2000)
CP750/740 Printer Driver 1.3
(for Windows Vista x64)



C86-1081

**COMPACT
disc**

Windows, Windows Vista and the Windows Vista logo are trademarks of Microsoft Corporation, registered in the U.S. and other countries. Macintosh and the Mac logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

保護シート

これは保護シートです。ペーパーカセットにペーパーを設置する前に取り除いてください。

Protection Sheet

Remove this sheet before putting paper in the paper cassette.

Feuille de protection

Veillez à retirer cette feuille de protection avant toute impression

Bitte entfernen Sie dieses Blatt, bevor Sie das Papier in die Papierkassette legen.

Retire esta protección antes de colocar el papel en el cassette

Foglio di protezione

Rimuovere questo foglio prima di inserire la carta nel cassetto.

保护片

将纸张放入纸匣之前，请将此片取出。

Made in Japan / Fabriqué en Japon / Hecho en Japón / 日本制造



Canon Customer Support

English

- The warranty of the product(s) is effective only in the country written on your warranty certificate.
- Please safekeep this sheet as it contains important information.

Deutsch

- Die Gültigkeit der Garantie des Productes/der Produkte beschränkt sich auf das angegebene Land auf Ihrem Garantieschein.
- Bitte bewahren Sie diesen Zettel sicher auf, da wichtige Information enthalten sind.

Español

- La garantía del producto o productos es válida sólo en el país que aparece escrito en su certificado de garantía.
- Guarde este impreso en lugar seguro ya que contiene información importante.

Français

- La garantie de ce ou ces produits n'est valide que dans le pays indiqué sur votre certificat de garantie.
- Veuillez conserver cette feuille car elle contient d'importantes informations.

Italiano

- La garanzia del prodotto (o prodotti) è valida solo nel paese indicato sul vostro certificato di garanzia.
- Siete pregati di tenere questo foglio in un posto sicuro perché contiene informazioni importanti.

中文简体

- 本产品的保证只在保证书上所记载的国家中有效。
- 此单记载有重要内容请妥善保管。

Canon Customer Support

Canon Inc.

30-2 Shimomaruko 3-chome, Ohta-ku, Tokyo
146-8501, Japan

NORTH AMERICA

Canon U.S.A., Inc.

Canon Customer Care Center
Phone (US): 1-800-828-4040 (Available Mon. - Fri., 9 AM to 8 PM Eastern Time)
www.powershot.com
Manuals available for download: <http://www.powershot.com/powershot2/customer/manual.html>

Canon Canada Inc.

Phone (Canada): 1-800-OK-CANON (1-800-652-2666) (24 hours/day, 7 days/week)
Manuals available for download: <http://www.canon.ca> (Go to "Customer Support")

EUROPE

Europe, Africa & Middle East

Canon Europa N.V.

PO Box 2262, 1180 EG Amstelveen, The Netherlands

Canon (UK) Ltd.

Helpdesk
Tel.: 08705 143 723 (Calls may be recorded.) Fax.: 08705 143 340

Canon Communication & Image France S.A.

Tél.: 01.41.99.70.70 Fax: 01.41.99.79.50

Canon Deutschland GmbH

Customer Hotline: (02151) 349-555

Canon Italia S.p.A.

Pronto: Canon: 02 8249 2000 E-mail: supporto@canon.it

Canon Belgium N.V. / S.A.

Helpdesk: 0900-10627
Tel.: (02) 722.04.11 Fax: (02) 721.32.74

Canon Luxembourg S.A.

Tel.: (352) 48 47 961 Fax: (352) 48 47 96232

Canon Nederland N.V.

Helpdesk: 023 - 5 681 681
Tel.: 023 - 5 670 123 Fax: 023 - 5 670 124

Canon Danmark A/S

Phone: +45 44882400 e-mail: helpdesk@canon.dk

Canon España S.A.

Help Desk: 906 301 255
Fax: (91) 411 54 48 E-mail: helpdesk1@btlink.net

Canon Norge as

Tlf. 22 62 93 21
Faks: 22 62 06 15 E-mail: helpdesk@canon.no

Finland

Canon OY

Puhelin: 010 54420 Fax: 010 544 4571
Help Desk: 0600 0 22606 (14,80 mk/min+pvm)
Help Desk: 0600 0 22666 (enint. 40mk/puhelu+pvm)
Sähköposti: helpdesk@canon.fi

Canon (Schweiz) AG

Tel. 01-835-6161 Fax: 01-835-6526 Hotline 0900 57 55 20

Canon Svenska AB

Helpdesk: 08-7448620

Austria

Canon GmbH

Zetschegasse 11, A-1230 Wien Vienna
Helpdesk Tel: 01 66 146 412 Fax: 01 66 146 308

OCEANIA

Canon Australia Pty. Ltd.

Info-Line: 131383
www.canon.com.au

Canon New Zealand Ltd.

Customer Care: (09) 489 0470
www.canon.co.nz

ASIA

Canon (China) Co., Ltd.

15F, Jinbao Building, No.89 Jinbao Street, Dongcheng District, Beijing 100005, China
Phone: (86) 10-95177178 (Call Center)

Canon Hongkong Co., Ltd.

Kowloon Depot : 18/F The Metropolis Tower, 10 Metropolis Drive Hunghom, Kowloon, Hong Kong
Phone: (852) 2170-2888 (Call Center) Fax: (852) 2428-3963

Canon Singapore Pte Ltd.

1 HarbourFront Avenue #04-01, Keppel Bay Tower Singapore 098632
Phone: (65) 6799-8888 Fax: (65) 6799-8882

Canon Marketing (Malaysia) Sdn Bhd.

Block D, Peremba Square, Saujana Resort, Section U2, 40150 Shah Alam, Selangor Darul Ehsan, Malaysia
Phone: (60) 3-7844-6000 Fax: (60) 3-7844-6048

Canon Marketing (Thailand) Co., Ltd.

9th - 10th Fl., 179/34-45 Bangkok City Tower, South Sathorn Road Thungmahamek, Sathorn, Bangkok 10120 Thailand
Phone: (66) 2-344-9999 Fax: (66) 2-344-9910

Canon Marketing (Philippines) Inc.

Marvin Plaza Building 2153 Don Chino Rocas Ave. Makati City, Metro Manila Philippines
Phone: (63) 2-884-9000 Fax: (63) 2-812-0067

Canon India Pvt Ltd.

2nd Floor, Tower A & B Cyber Greens, DLF Phase III Gurgaon - 122 002 Haryana, India
Phone: (91) 124-516-0000 Fax: (91) 124-516-0011



Online product registration for Canadian Customers only.

**Register your product online at
www.canon.ca/product_registration and...**



✓ **Receive firmware and software upgrades**

Canon Canada updates software and firmware for its digital photography products. You will be among the first ones to receive the notifications.

✓ **Receive the latest product and promotion info.**

Upon your request, we will send you information on new Canon products and promotions.

✓ **As a valued customer, you will be notified**

Canon prides itself on being proactive, so rest assured you will be emailed any important information relating specifically to your product.

Enregistrement de produits en ligne pour les clients canadiens seulement.

**Enregistrez votre produit en ligne à
www.canon.ca/product_registration et...**



✓ **Recevez les mises à niveau de microprogrammation et de logiciels**

Canon Canada met à jour la microprogrammation et les logiciels de ses produits de photographie numérique. Vous serez parmi les premières personnes à recevoir les notifications correspondantes.

✓ **Recevez les renseignements les plus récents sur les produits et les promotions**

Sur demande, nous vous ferons parvenir des renseignements sur les nouveaux produits et promotions Canon.

✓ **En tant que membre de notre estimée clientèle, vous recevrez une notification**

Étant donné que Canon mise sur une approche proactive, vous pouvez être certain(e) que vous recevrez par courriel tous les renseignements importants relatifs à votre produit.



Online product registration for U.S.A. Customers only.

**Register your product online at
www.powershot.com/productregistration and...**



✓ **Receive firmware and software upgrades**

Canon USA often updates the software and firmware for its digital photography products. You will be among the first ones to receive the notifications.

✓ **Protect your product**

We will keep the model number and date of purchase of your new Canon product on file to help you refer to this information in the event of an insurance claim such as loss or theft.

✓ **Receive information on new products and promotions**

Upon your request, we will send you information on Canon new products and promotions.

The limited warranty set forth below is given by Canon U.S.A., Inc. in the United States and Canon Canada Inc. in Canada with respect to the Canon-brand Card Photo Printer (the "Product") purchased with this limited warranty, when purchased and used in the United States or Canada. This limited warranty only applies to the Product packaged with this limited warranty. Canon U.S.A., Inc. and Canon Canada Inc. will be referred to collectively herein as "Canon."

The Product, when delivered to you in new condition in its original container, is warranted against defects in materials and workmanship under normal use and service for a period of one (1) year from the date of original purchase. Defective parts or a defective Product returned to Canon, or an Authorized Service Center, and proven to be defective upon inspection, will be repaired with new or comparable rebuilt parts or exchanged for a refurbished Product as determined by Canon or the Authorized Service Center. Warranty replacement shall not extend the original warranty period. This warranty does not cover any accessories, nor does it cover any consumables, such as paper or ink cartridges, as to which there shall be no warranty or replacement.

This limited warranty shall only apply if the Product is used in conjunction with compatible computers, peripheral equipment and software, as to which items Canon shall have no responsibility. **Non-Canon brand equipment and software that may be distributed with the Product are sold "as is" and without warranty of any kind by Canon, including any implied warranty or condition regarding merchantability or fitness for a particular purpose, and all such warranties and conditions are disclaimed. The sole warranty, if any, with respect to such non-Canon brand items is given by the manufacturer or producer thereof.**

This limited warranty covers all defects encountered in normal use of the Product and does not apply in the following cases:

- Loss of or damage to the Product due to abuse, neglect, mishandling, improper packaging by you, alteration, accident, electrical current fluctuations, improper use, failure to following operating maintenance or environmental conditions prescribed in Canon's user's manual or other documentation, or services performed by someone other than Canon or its Authorized Service Center. Without limiting the foregoing, water damage, sand/corrosion damage, battery leakage, dropping the printer, scratches, and abrasions will be presumed to have resulted from misuse, abuse or failure to operate the Product as set forth in the operating instructions.
- Use of parts or supplies (other than those sold by Canon) that cause damage to the Product or cause abnormally frequent service calls or service problems.
- Use of supplies or parts (other than those distributed by Canon).
- If the Product has had its serial number or dating defaced, altered or removed.
- If the Product is used for commercial or industrial use.

NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY, GUARANTY OR CONDITION, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND CANON, OR ITS AUTHORIZED SERVICE CENTER. (SOME STATES AND PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.) CANON SHALL NOT BE LIABLE FOR LOSS OF REVENUES OR PROFITS, INCONVENIENCE, EXPENSE FOR SUBSTITUTE EQUIPMENT OR SERVICE, STORAGE CHARGES, LOSS OR CORRUPTION OF DATA, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CANON, OR ITS AUTHORIZED SERVICE CENTER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST CANON, OR ITS AUTHORIZED SERVICE CENTER, BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE POSSESSION, USE, MISUSE, OR INABILITY TO USE THE PRODUCT SOLD BY CANON NOT CAUSED SOLELY AND DIRECTLY BY THE NEGLIGENCE OF CANON, OR ITS AUTHORIZED SERVICE CENTER. (SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU.) THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THE PRODUCT OR THE PERSON FOR WHOM IT WAS PURCHASED AS A GIFT, AND STATES YOUR EXCLUSIVE REMEDY.

For Products Purchased in the U.S.A.

You may obtain technical support for your Product as follows:

- E-mail support via our Web Site at www.usa.canon.com
- Telephone assistance from a Canon U.S.A. Customer Care representative free of charge during regular business hours (currently Monday-Friday 9:00 a.m.-8:00 p.m. EST, excluding holidays) at **1-800-828-4040 or 1-800-OK-CANON (1-800-652-2666)**.

For Products Purchased in Canada

You may obtain technical support for your Product as follows:

- Telephone assistance from a Canon Canada Customer Care representative free of charge during regular business hours (currently Monday-Friday 9:00 a.m.-8:00 p.m. EST, excluding holidays) at **1-800-OK-CANON (1-800-652-2666)**.

Have your Product serial number and your date of purchase available when you make the call to expedite service. A Canon Customer Care representative will attempt to diagnose the nature of the problem and correct it over the telephone. If the problem cannot be corrected over the telephone, you will be asked to follow the applicable procedures for MAIL-IN SERVICE. Note that a dated proof of purchase is required at the time of service. This requirement will be satisfied by providing a copy of your dated bill of sale.

*Technical support program specifics subject to change without notice.

MAIL-IN SERVICE

MAIL-IN SERVICE is a program under which your Product is repaired by a Canon U.S.A. or a Canon Canada Authorized Service Center. You will be given the name, address and phone number of an Authorized Service Center, by contacting the Canon U.S.A. Customer Care Center at 1-800-828-4040 or Canon Canada Customer Information Centre at 1-800-OK-CANON (1-800-652-2666). It is your responsibility to properly package and send the defective Product together with a copy of your dated proof of purchase, a complete explanation of the problem and a return address to the Authorized Service Center at your expense. Do not include any other items with the defective Product. The defective Product covered by this limited warranty will be repaired and returned to you without charge by the Authorized Service Center. Any Product received by the Authorized Service Center that is not covered by the limited warranty will be returned unrepaid, or, at the discretion of the Authorized Service Center, you may receive a written estimate of repair at such cost as the Authorized Service Center may establish from time to time.

This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state to state (or province to province in Canada).

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
USA

(The above address is not to be used for the MAIL-IN SERVICE program)

Canon Canada Inc.
6390 Dixie Road
Mississauga, Ontario L5T 1P7
Canada

(The above address is not to be used for the MAIL-IN SERVICE program)

© 2002 Canon U.S.A., Inc. Canon is a registered trademark of Canon Inc.
All brand or product names are registered trademarks or trademarks of their respective owners.

CANON U.S.A., INC.

CANON CANADA INC.

NAME		
NOM		
ADDRESS		
ADRESSE		
CITY	PROVINCE	POSTAL CODE
VILLE		CODE POSTAL

THIS WARRANTY CARD AND YOUR BILL OF SALE MUST BE PRESENTED FOR WARRANTY SERVICE.

CETTE CARTE DE GARANTIE ET VOTRE PREUVE D'ACHAT DOIVENT ÊTRE PRÉSENTÉES POUR RECEVOIR LE SERVICE SOUS GARANTIE.

DEALER'S NAME & ADDRESS MARCHAND NOM & ADRESSE

MODEL MODELE	SELPHY CP740
BODY NO. BOITIER NO	
PURCHASE DATE DATE D'ACHAT	/ /

CDW-M006-02Y 0906CH100

PRINTED IN JAPAN
IMPRIMÉ AU JAPON

Dealer Record of Canon Purchase Fiche d'Achat pour Concessionnaire Canon

Complete this card at time of sale.
A remplir au moment de l'achat

PRESENT OWNERSHIP AND PRODUCTS INTERESTED IN
Articles déjà en possession ou jugés dignes d'intérêt

CAMERAS	(Camera)	(Lens)
APPAREILS	(Appareil)	(Objectif)
PHOTO	(Camera)	(Lens)
	(Appareil)	(Objectif)

OWNS En Possession	INTERESTED IN Intéressé par
•	•
•	•

INTERCHANGEABLE LENS
Objectif interchangeable

OWNS
En possession

INTERESTED IN
Intéressé par

OTHER ACCESSORIES
Autres accessoires

OWNS
En possession

INTERESTED IN
Intéressé par

MODEL Modèle	SELPHY CP740	SERIAL NO. No. de série	
-----------------	--------------	----------------------------	--

CUSTOMER
Client

NAME
Nom

ADDRESS
Adresse

CITY/STATE
Ville/Province

ZIP
Code postal

PHONE
Téléphone

La présente garantie restreinte est fournie par Canon U.S.A., Inc. aux États-Unis et Canon Canada Inc. au Canada à l'égard des imprimantes photo carté de marque Canon (le « Produit ») achetées et couvertes par ladite garantie restreinte, lorsqu'elles sont achetées et utilisées aux États-Unis ou au Canada. La présente garantie restreinte s'applique uniquement au Produit emballé à avec ladite garantie restreinte. Canon U.S.A., Inc. et Canon Canada Inc. seront désignées collectivement sous le nom de « Canon ».

Le Produit, lorsqu'il vous est livré à l'état neuf dans son emballage d'origine, est garanti contre tout vice de matière et de fabrication, dans des conditions d'utilisation et de service normales, pendant une période d'un (1) an à compter de la date de l'achat initial. Les pièces défectueuses ou un Produit défectueux qui sont retournés à Canon ou à un centre d'entretien et après-vente autorisé, et dont l'inspection confirme une défectuosité, seront réparés à l'aide de nouvelles pièces ou remises à neuf comparables, ou échangés contre un Produit remis à neuf, tel que déterminé par Canon ou le centre d'entretien et après-vente autorisé. La période de garantie pour le remplacement ne peut dépasser la période de garantie initiale. La présente garantie restreinte ne s'applique pas aux accessoires ni aux consommables, tels que le papier ou les cartouches d'encre, pour lesquels il n'y a pas de garantie ni de remplacement.

La présente garantie restreinte s'applique uniquement si le Produit est utilisé conjointement avec des ordinateurs équipement périphérique et des logiciels compatibles, pour lesquels Canon n'assume aucune responsabilité. L'équipement et les logiciels de marque autre que Canon qui peuvent être distribués avec le Produit sont vendus « tels quels », sans garantie d'aucune sorte par Canon, y compris toute garantie implicite ou condition à l'égard de la qualité marchande ou de l'aptitude à une fin particulière. De telles garanties et conditions ne sont pas reconnues par Canon. La seule garantie, si garantie il y a, liée à un article d'une marque autre que Canon, est donnée par le fabricant ou le producteur de cet article.

La présente garantie restreinte couvre toutes les défectuosités constatées pendant l'utilisation normale du Produit et ne s'applique à aucun des cas suivants :

- (a) perte ou endommagement du Produit, causé par l'usage abusif, la négligence, la manipulation inadéquate, l'emballage inadéquat fait par vous, les modifications, les accidents et les variations de courant électrique, ainsi que l'omission d'observer les directives à l'égard du mode d'utilisation, des conditions d'entretien et du milieu ambiant énoncées dans le manuel d'utilisation de Canon ou dans d'autres documents, ou les services effectués ailleurs que chez Canon ou dans son centre d'entretien et après-vente autorisé. De tels dommages comprennent, mais sans s'y limiter, les dommages causés par l'eau, le sable, la corrosion, la fuite des piles, la chute de l'imprimante, les égratignures et l'abrasion, dommages que l'on présume découler d'un usage impropre, d'un usage abusif ou de l'impossibilité d'utiliser le Produit selon les directives d'utilisation ;
- (b) utilisation de pièces ou de fournitures (autres que celles vendues par Canon) ayant pour effet d'endommager le Produit ou d'entraîner une fréquence anormale d'appels d'entretien ou de problèmes nécessitant le recours au service d'entretien et après-vente ;
- (c) utilisation de pièces ou de fournitures (autres que celles distribuées par Canon) ;
- (d) modification ou retrait du numéro de série ou de la datation du Produit ;
- (e) utilisation du Produit à des fins commerciales ou industrielles.

AUCUNE GARANTIE IMPLICITE, Y COMPRIS TOUTE GARANTIE IMPLICITE OU CONDITION À L'ÉGARD DE LA QUALITÉ MARCHANDE OU DE L'APTITUDE À UNE FIN PARTICULIÈRE, NE S'APPLIQUE AU PRODUIT APRÈS LA PÉRIODE PRÉSCRITE DE LA GARANTIE EXPRESSE RESTREINTE SUSMENTIONNÉE ET, À L'EXCEPTION DE LA DITE GARANTIE EXPRESSE RESTREINTE, AUCUNE AUTRE GARANTIE EXPRESSE NI AUCUNE AUTRE CONDITION OU GARANTIE ACCORDÉE PAR TOUTE PERSONNE OU ENTITÉ À L'ÉGARD DU PRODUIT N'AURA POUR EFFET DE LIER CANON OU SON CENTRE D'ENTRETIEN ET APRÈS-VENTE AUTORISÉ À TOUTE OBLIGATION, QUELLE QU'ELLE SOIT (CERTAINS ÉTATS ET CERTAINES PROVINCES N'AUTORISENT AUCUNE RESTRICTION SUR LA DURÉE D'UNE GARANTIE IMPLICITE ; AINSI, IL EST POSSIBLE QUE LA RESTRICTION ÉNONCÉE CI-DESSUS NE S'APPLIQUE PAS DANS VOTRE CAS.) CANON N'ASSUME AUCUNE RESPONSABILITÉ À L'ÉGARD DE LA PERTE DE PRODUITS D'EXPLOITATION OU DE PROFITS, NI À L'ÉGARD DES INCONVÉNIENTS ET DES FRAIS ENGAGÉS POUR DE L'ÉQUIPEMENT DE REMPLACEMENT, DES SERVICES D'ENTRETIEN ET APRÈS-VENTE, POUR L'ENTREPOSAGE, LA PERTE OU LA CORRUPTION DE DONNÉES, NI À L'ÉGARD DE TOUT DOMMAGE SPECIAL, INDIRECT OU ACCESSOIRE DÉCOULANT DE L'USAGE OU DE L'USAGE IMPROPRE, OU DE L'IMPOSSIBILITÉ D'UTILISER LE PRODUIT, QUELLE QUE SOIT L'ARGUMENTATION JURIDIQUE SUR LAQUELLE S'APPUIE LA DEMANDE, ET MÊME SI CANON OU SON CENTRE D'ENTRETIEN ET APRÈS-VENTE AUTORISÉ ONT ÉTÉ INFORMÉS DE LA POSSIBILITÉ DE TELS DOMMAGES. EN AUCUN CAS, AUCUN RECOURS, QUELLE QU'EN SOIT LA FORME, CONTRE CANON OU SON CENTRE D'ENTRETIEN ET APRÈS-VENTE AUTORISÉ NE SERA SUPÉRIEUR AU MONTANT DU PRIX D'ACHAT DU PRODUIT À L'ORIGINE DES DOMMAGES PRÉSUMÉS, SANS VOUS LIMITER À CE QUI PRÉCÈDE. VOUS ASSUMEZ TOUS LES RISQUES ET TOUTE LA RESPONSABILITÉ À L'ÉGARD DES PERTES, DES DOMMAGES MATÉRIELS ET DES BLESSURES CORPORELLES SUBIS PAR VOUS, VOTRE PROPRIÉTÉ OU D'AUTRES PERSONNES OU LEUR PROPRIÉTÉ EN RAISON DE LA POSSESSION, DE L'USAGE, DE L'USAGE IMPROPRE, OU DE L'IMPOSSIBILITÉ D'UTILISER LE PRODUIT VENDU PAR CANON. À MOINS QUE LESDITS DOMMAGES MATÉRIELS, PERTES ET BLESSURES CORPORELLES N'AIENT ÉTÉ CAUSÉS DIRECTEMENT ET EXCLUSIVEMENT PAR LA NÉGLIGENCE DE CANON OU SON CENTRE D'ENTRETIEN ET APRÈS-VENTE AUTORISÉ. (CERTAINS ÉTATS ET CERTAINES PROVINCES N'AUTORISENT AUCUNE EXCLUSION NI RESTRICTION DES DOMMAGES ACCESSOIRES OU INDIRECTS ; AINSI, IL EST POSSIBLE QUE LA RESTRICTION OU L'EXCLUSION ÉNONCÉE CI-DESSUS NE S'APPLIQUE PAS DANS VOTRE CAS.) LA PRÉSENTE GARANTIE RESTREINTE N'EST PAS ACCORDÉE À D'AUTRES PERSONNES QUE L'ACHÉTEUR INITIAL DU PRODUIT OU LA PERSONNE QUI A REÇU LEDIT PRODUIT EN CADEAU ET CONSTITUE VOTRE RECOURS EXCLUSIF.

Pour les produits achetés aux États-Unis

Vous pouvez obtenir un soutien technique pour votre Produit comme suit :

- Soutien courriel par l'intermédiaire de notre site Web, à www.usa.canon.com
- Assistance téléphonique auprès d'une représentante ou d'un représentant du Centre de renseignements clientèle de Canon U.S.A., sans frais, durant les heures normales d'ouverture (actuellement du lundi au vendredi, de 9 h à 20 h, HNE, à l'exclusion des jours fériés) au **1 800 828-4040** ou **1 800 OK CANON (1 800 652-2666)**.

Pour les produits achetés au Canada

Vous pouvez obtenir un soutien technique pour votre Produit comme suit :

- Assistance téléphonique auprès d'une représentante ou d'un représentant du Centre de renseignements clientèle de Canon Canada, sans frais, durant les heures normales d'ouverture (actuellement du lundi au vendredi, de 9 h à 20 h, HNE, à l'exclusion des jours fériés) au **1 800 OK CANON (1 800 652-2666)**.

Lors de l'appel, assurez-vous d'avoir le numéro de série du Produit et la date d'achat à portée de la main afin d'accélérer le service. Une représentante ou un représentant du Centre de renseignements clientèle de Canon tentera, le cas échéant, de déterminer la nature du problème et de résoudre celui-ci par téléphone. S'il est impossible de résoudre le problème par téléphone, on vous priera de vous conformer à la procédure applicable pour le SERVICE POSTAL. Veuillez noter qu'une preuve d'achat datée est requise lors du service d'entretien et après-vente. Il suffit de fournir une copie de votre acte de vente daté.

* Les détails du programme de soutien technique sont sujets à changement sans préavis.

SERVICE POSTAL

Le SERVICE POSTAL est un programme selon lequel les réparations de votre Produit sont effectuées par un centre d'entretien et après-vente autorisé de Canon U.S.A. ou de Canon Canada. On vous fournira le nom, l'adresse et le numéro de téléphone d'un centre d'entretien et après-vente autorisé lorsque vous communiquerez avec le Centre d'information à la clientèle de Canon U.S.A. ou 1 800 828-4040 ou au Centre d'information à la clientèle de Canon Canada au 1 800 OK CANON (1 800 652-2666). Il vous incombe d'emballer adéquatement le Produit défectueux et de le faire parvenir, à vos frais, accompagné d'une copie de votre preuve d'achat datée, d'une explication détaillée du problème et d'une adresse de retour, au centre d'entretien et après-vente autorisé. Veuillez ne pas inclure d'autres articles avec le Produit défectueux. Le Produit défectueux couvert par la présente garantie restreinte sera réparé et vous sera retourné sans frais par le centre d'entretien et après-vente autorisé. Tout Produit reçu par le centre d'entretien et après-vente autorisé qui n'est pas couvert par la présente garantie restreinte vous sera retourné, sans aucune réparation ou, à la discrétion du centre d'entretien et après-vente autorisé, vous pourrez recevoir une estimation écrite des réparations selon le tarif que le centre d'entretien et après-vente autorisé peut établir à l'occasion.

La présente garantie restreinte vous accorde des droits particuliers reconnus par la loi et il se peut que vous disposiez d'autres droits qui varient d'un État à l'autre (ou d'une province à l'autre au Canada).

Canon U.S.A., Inc.
One Canon Plaza
Lake Success, NY 11042
É.-U.

(L'adresse ci-dessus ne doit pas être utilisée dans le cadre du programme de SERVICE POSTAL.)

Canon Canada Inc.
6390 ch Dixie
Mississauga ON L5T 1P7
Canada

(L'adresse ci-dessus ne doit pas être utilisée dans le cadre du programme de SERVICE POSTAL.)

© Canon U.S.A., Inc., 2002. Canon est une marque déposée de Canon Inc.

Tous les noms de marques ou de produits sont des marques déposées ou des marques de commerce de leurs propriétaires respectifs.

REMARKS

REMARKS